

Installation manual

Horizontal Pipe Support
SUPERLOCK V TYPE SRV

January 31, 2020

Inaba Denki Sangyo. Co., Ltd.
Research & development division

1. Read at the beginning

SRV is used to horizontally support pipes onto W3/8" threaded rod.


Do not use for other applications.

<NOTE>

- For indoor use only. Do not use outdoors.
- Do not use it for anything other than W3/8 bolts.
- Allowable static load is 196N (20kgf) (≒44lbs). Do not use for piping where more load is applied.
- Wear working gloves, goggles, etc. during installation.


2. Installation Procedure

STEP 1: Hitch the lower hook then the upper hook onto W3/8" threaded rod in turn.

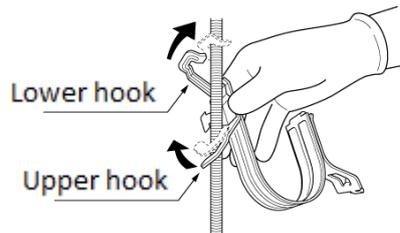

NOTE: Keep the lid open during attachment.

STEP 2: Temporarily place pipes, press the lever to adjust the height, then close the lid..

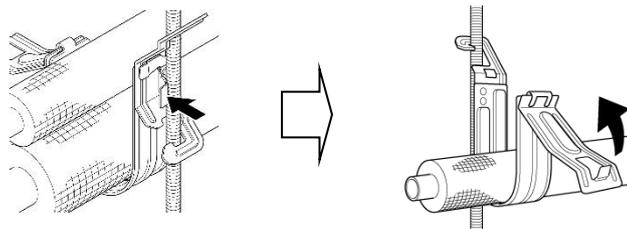

NOTE: When removing SRV from W3/8" threaded rod, open the lid, then remove it.

SRV can't be removed while the lid is closed.

This is a structure that can demonstrate seismicity by closing the lid.

Be sure to close the lid before use.

Back to back installation

Attach the lower hook of the second SRV onto W3/8" threaded rod like it intersects the lower hook of the first one.

